


PERIODIC MAINTENANCE AND MINOR REPAIR

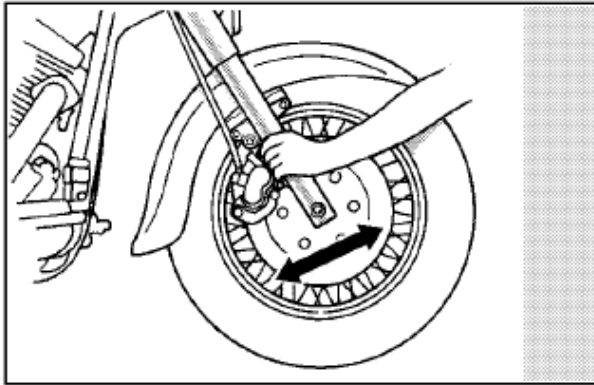

Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Place a stand under the engine to raise the front wheel off the ground.

WARNING

Securely support the motorcycle so that there is no danger of it falling over.

2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

Checking the wheel bearings

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

W Mega skrócie:

1. Unieś przód
2. Chwyć za pały i poruszaj w przód i w tył (niestety brak definicji siły)
3. Jak czujesz luz musisz wyregulować luz łożyska główki ramy
4. Yamaha dziękuje, że stosujesz się do instrukcji i skoro wiesz, że jest NOK to zgłoś się do serwisu 😊